



SHOWER TRAY COMBI TRAY FITTING INSTRUCTIONS FOR WOODEN FLOOR INSTALLATION

IMPORTANT: Protect shower base from scuffing by using cardboard packaging.
NOTE: This tray can be installed on either the top of the existing floor or on top of the floor joists.

Decide whether the tray is going to be installed on top of the existing floor or on top of the floor joists.

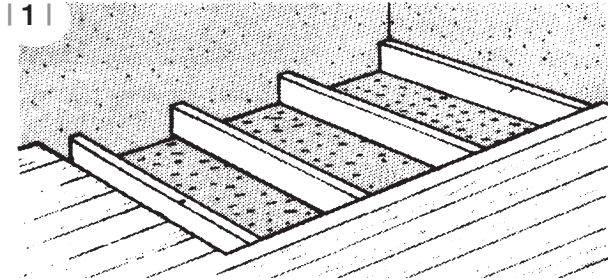


- 1 | Tray on top of existing floor**
Do not cut the floor
Tray on top of floor joists (Recessed)
Mark out size of the tray on the existing floor and cut out floor boards.
Before trimming any obstructions such as floor joists ensure the tray sits flat in the space provided.

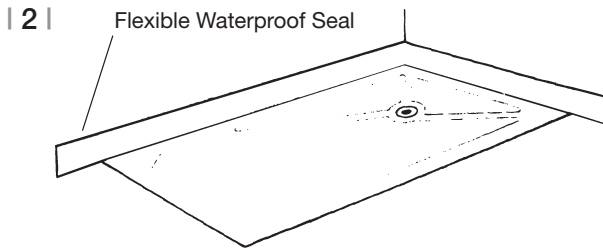

- 2 |** Place the shower tray in position and add a strip of flexible waterproof seal between the tray and the wall to provide a watertight seal.


3 | SHOWER TRAP WITH REMOVABLE WASTE

Supplied as standard with all shower trays

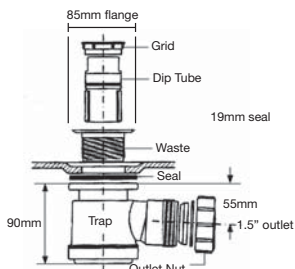


Resealing anti-siphon traps with either a 50mm or 80mm water seal can be supplied if required

When fitting to tray assemble trap as shown in diagram making sure to coat trap body and under shower base with neutral silicon sealant above and below flat rubber seal.

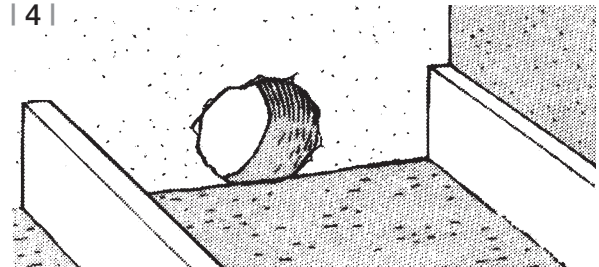

- 4 |** Decide on direction of waste outlet and break out wall if required, allowing the waste pipe to connect to the out flow drain.

- 5 | Tray on top of existing floor**
Apply a high strength filled rubber resin gap filling adhesive between the tray and the existing floor to ensure that the tray is held securely in place.
Tray on top of floor joists (Recessed)
IMPORTANT: Both ends of the tray must be supported. If either end of the tray does not rest on the joist, then purlins (cross-bracing) must be added between the joists to support the ends.

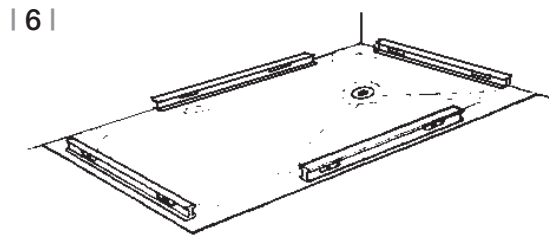

- 6 |** It is important that the shower tray is level, check the flat surfaces around the shower area. These should be level regardless of existing floor levels.

- 7 |** Make good any plaster work prior to tiling.

- 8 | Tray on top of floor joists (Recessed)**
If complete level access is required for a floor joint installation it will be necessary to add plywood to the remaining floor area.

- 9 |** NOTE: After the tray has been fitted apply silicone sealant to seal both open edges.