



| 1 |

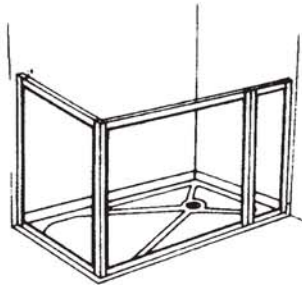

Position enclosure on the tray as if fitted, ensuring the enclosure sits on the flat section of the tray.

| 4 |

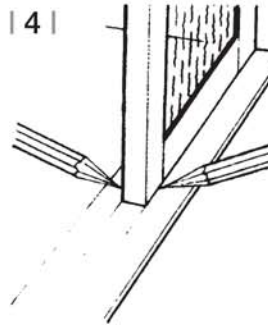


Fixed panel with pole profile

Slide fixed panel into wall profile and mark the position of the spigot on the tray. Drill the spigot location using the 4.0mm diameter drill, attach it in place on the tray using the screw provided. Slide fixed panel back into wall profile and the pole profile onto the spigot on the tray. Tighten the hexagon screw onto the spigot and slide the grip cover strip into place.

Fixed panel without pole profile


Slide fixed panel into wall profile. Ensure it runs parallel to the edge of tray. Mark position of the metal foot support channel onto the tray. Remove panel from tray, position support channel on tray and secure with screws provided.

| 2 |

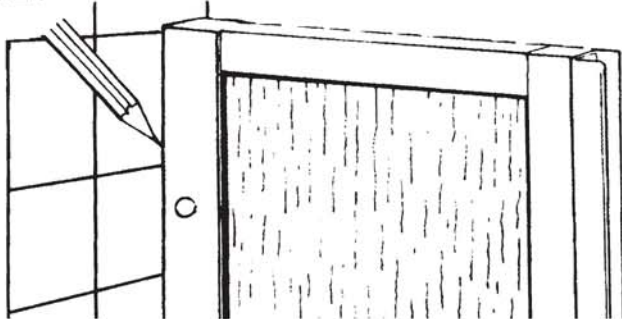

| 2 | Mark on the walls the top and sides of the door and jamb channel sections, then remove channels from enclosure.

| 5 |

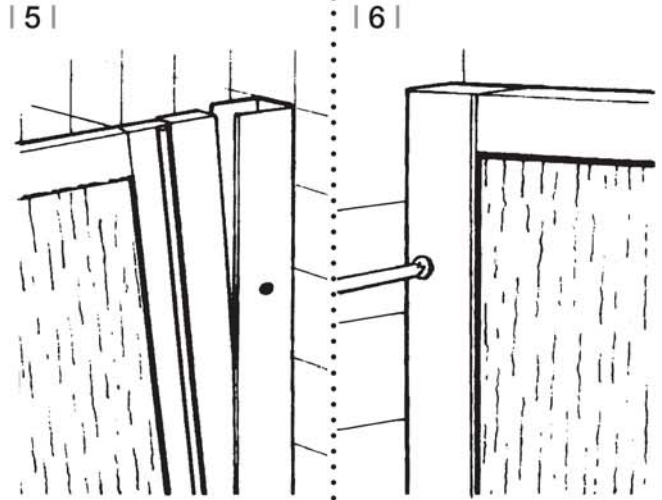


| 5 | Place enclosure back into wall profiles (as in figure 1). Adjust enclosure and fixed panel to compensate for out of true walls.

| 6 |

| 6 | When doors are correct and in line with fixed panel, check the bottom seal is in contact with the tray to ensure a watertight seal, adjust if necessary. When correct drill through the sides of the wall profile, using a 3.5mm diameter drill, into fixed vertical panel and fit self tapping screws with cap covers provided.

| 3 |

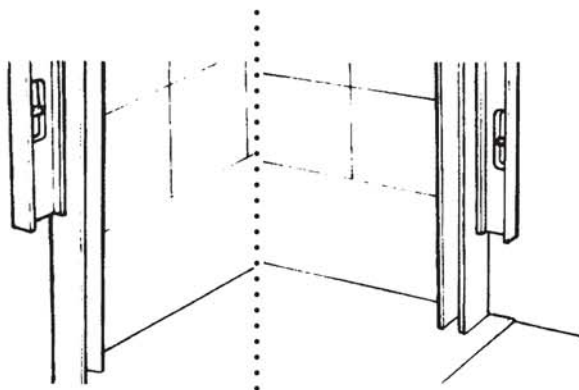

| 3 | Place door and jamb channels in position against the marks on walls, check vertical with builders level. Mark through slots, drill wall and fasten channels with suitable plugs and screws.

| 7 |

| 7 | Keeping the doors correct and in-line, apply silicone sealant to the base of the rise and fall hinge. When seated correctly drill through the existing hole in the rise and fall hinge base, using a 3.5mm drill, into the tray. Fit self tapping screws provided.

| 8 |

| 8 | Apply silicone sealant to both the sides and the base of the wall profiles.
DO NOT SILICONE BASE OF DOOR.

| 9 |

| 9 | Where fitted, curtains should be located so that the floor to curtain gap should be a maximum of 25mm.