



IMPORTANT: Please be careful not to scuff profiles during fitting.

| 1 |

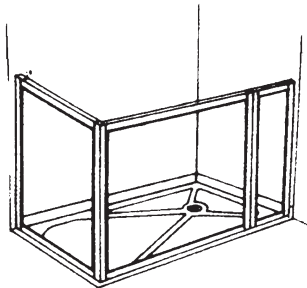


Position enclosure on the tray as if fitted, ensuring the enclosure sits on the flat section of the tray.

| 2 |

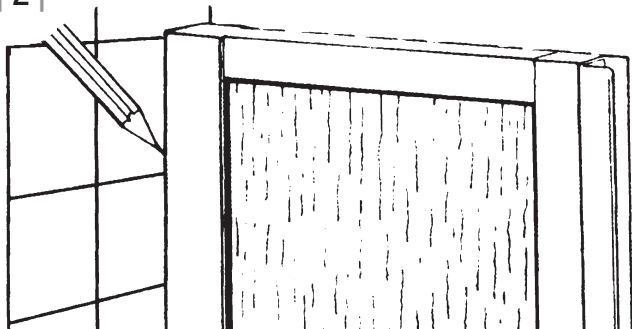


| 2 | Mark on the walls the top and sides of the door and jamb channel sections, then remove channels from enclosure.

| 3 |

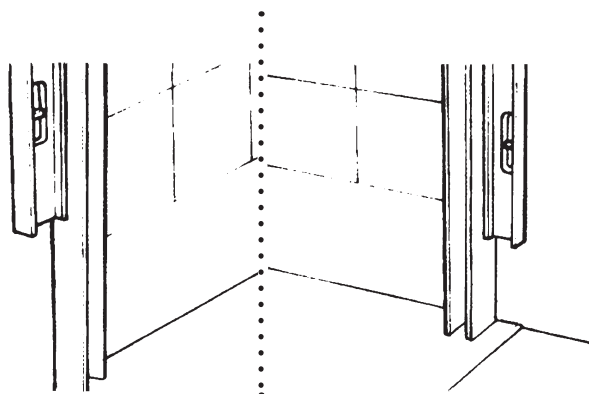


| 3 | Place door and jamb channels in position against the marks on walls, check vertical with builders level. Mark through slots, drill wall and fasten channels with suitable plugs and screws.

| 4 |

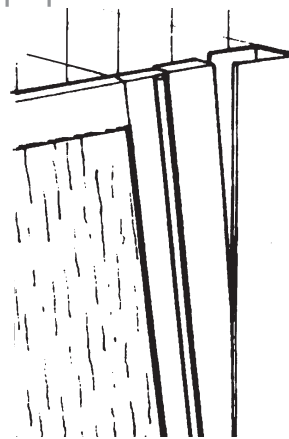

| 4 | Place enclosure back into wall profiles (as in figure 1). Adjust enclosure and fixed panel to compensate for out of true walls.

| 5 |

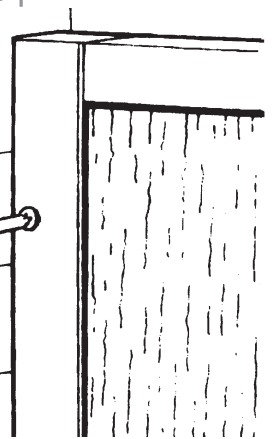

| 5 | When doors are correct and in line with fixed panel, check the bottom seal is in contact with the tray to ensure a watertight seal, adjust if necessary. When correct drill through the sides of the wall profile, using a 3.5mm diameter drill, into fixed vertical panel and fit self tapping screws with cap covers provided.

| 6 | Keeping the doors correct and in-line, apply silicone sealant to the base of the rise and fall hinges. When seated correctly drill through the existing holes in the rise and fall hinge bases, using a 5.0mm drill, into the tray. Fit self tapping screws provided.

| 7 | Apply silicone sealant to both the sides and the base of the wall profiles.  
**DO NOT SILICONE BASE OF DOOR.**

| 8 | Where fitted, curtains should be located so that the floor to curtain gap should be a maximum of 25mm.